


CORRUBIT COMPONENTS REQUIRED

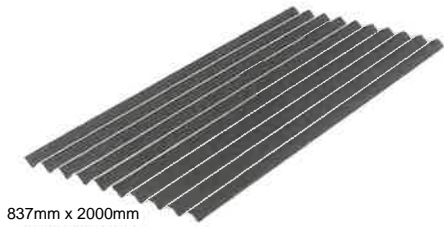

837mm x 2000mm  
CORRUBIT  
ROOFING SHEETS



1000mm x 450mm  
CORRUBIT  
ROOF RIDGES



1000mm x 130mm x 200mm  
CORRUBIT  
ROOF EDGES



COLOUR-MATCHED  
CORRUBIT  
ROOF NAILS

TOOLS REQUIRED



PROTECTIVE  
GLOVES



PROTECTIVE  
GLASSES



SPRAY  
LUBRICATING  
OIL

see  
TOP TIPS  
page 3



COARSE TOOTH  
HAND SAW

OR



POWER  
SAW



HAMMER



TAPE  
MEASURE




STRAIGHT  
EDGE

INSTALLATION


1

MEASURE  
ROOF

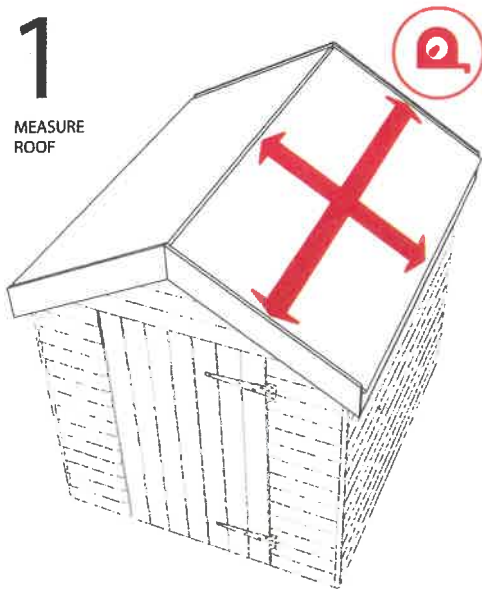


2

INSTALL FIRST  
CORRUBIT  
ROOFING SHEET

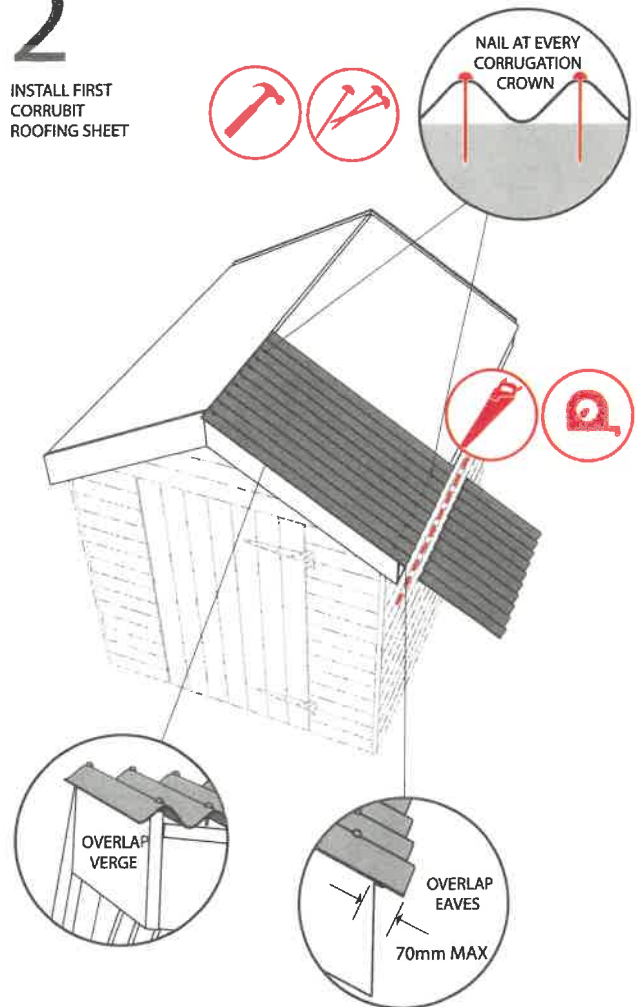

3


INSTALL SECOND  
CORRUBIT  
ROOFING SHEET

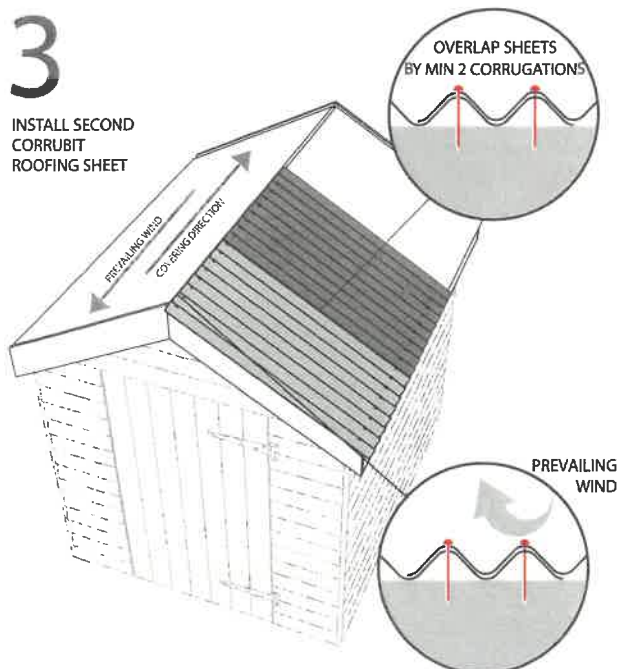

INSTALLATION


4

INSTALL FINAL  
CORRUBIT  
ROOFING SHEET

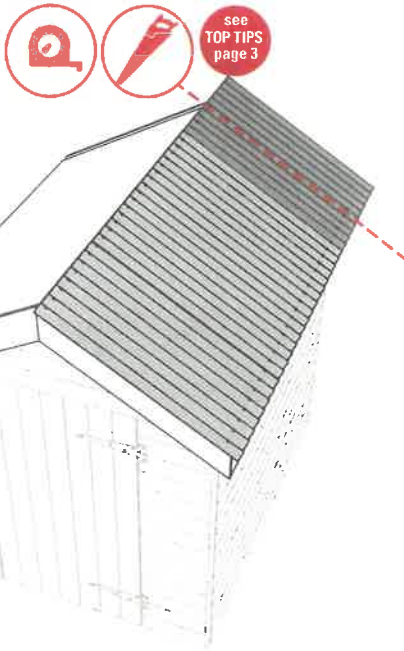


5

FOLD AND  
NAIL ROOF  
VERGES

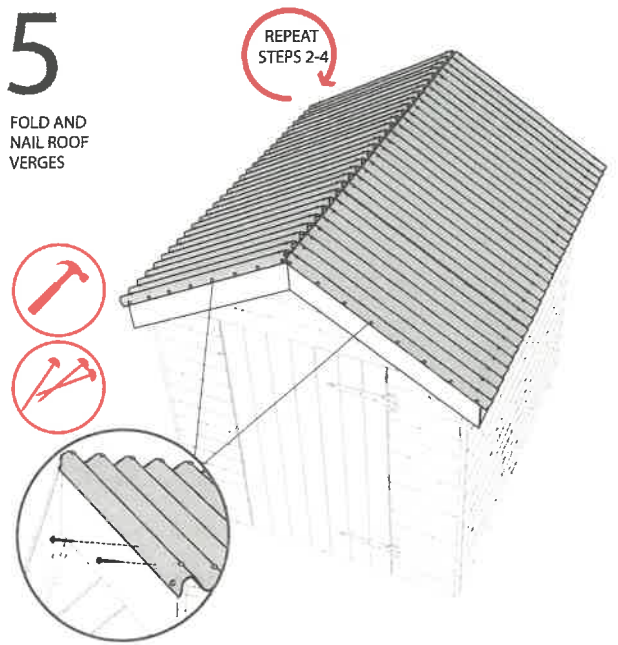


6

OR INSTALL  
CORRUBIT  
ROOF EDGES

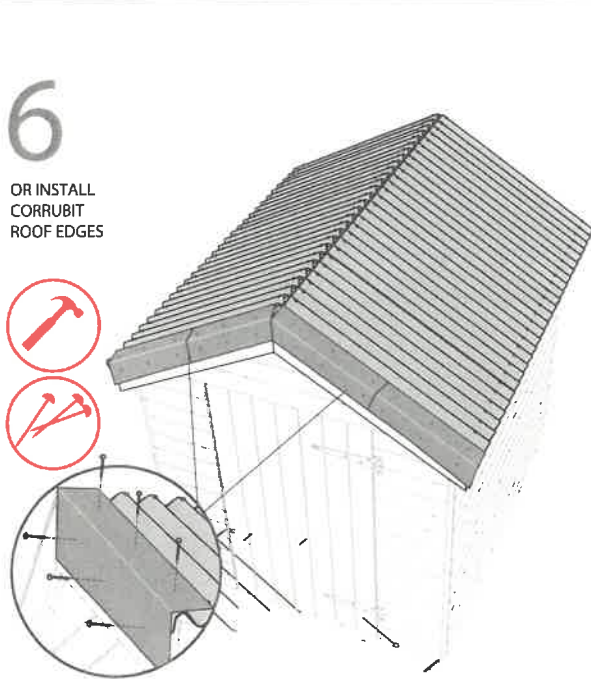


7

INSTALL  
CORRUBIT  
ROOF RIDGES

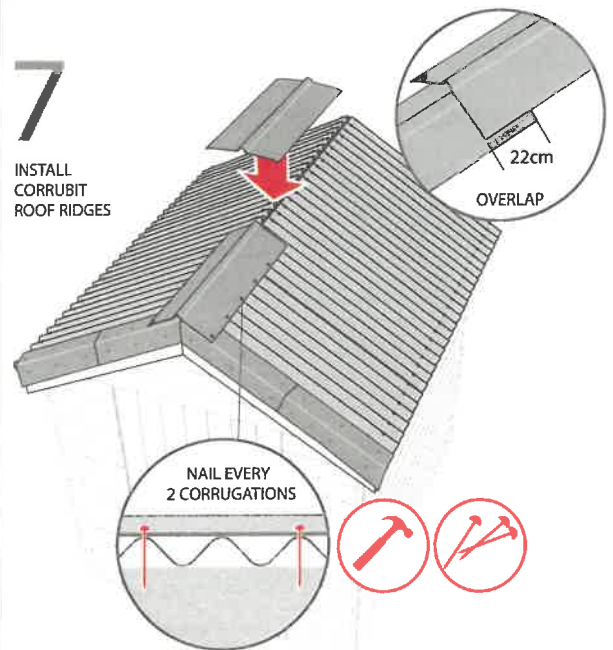


8

COMPLETE  
THE  
INSTALLATION

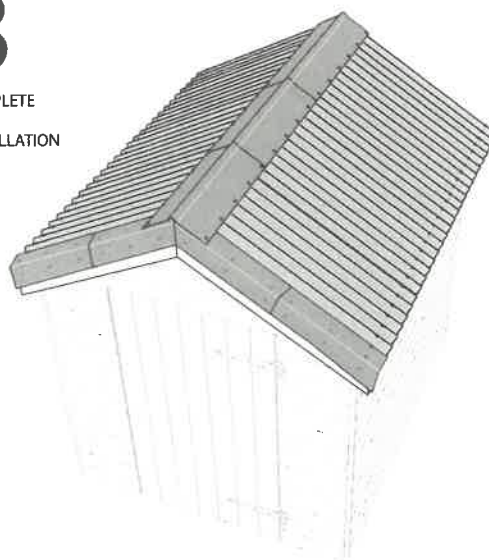




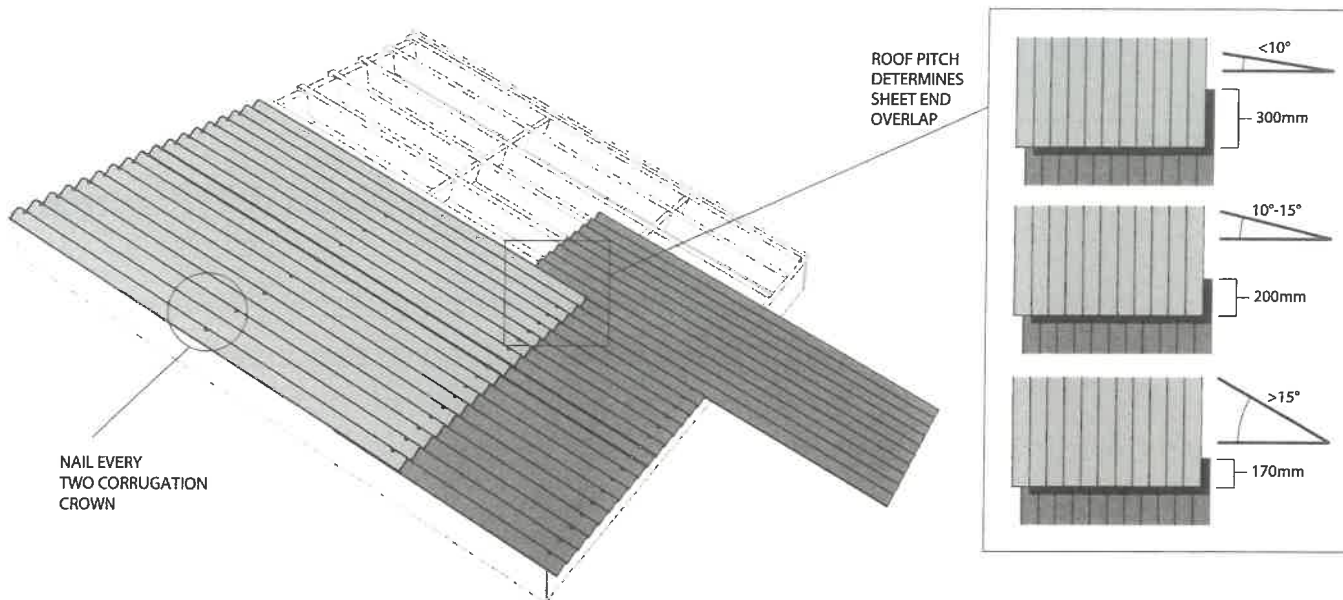


INSTALLATION MANUAL TOP TIPS

**1** AVOID THE NECESSITY FOR VERTICAL CUTS BY OVERLAPPING ROOF SHEETS BY MORE THAN 2 CORRUGATIONS TO EXACTLY MATCH THE ROOF DIMENSION

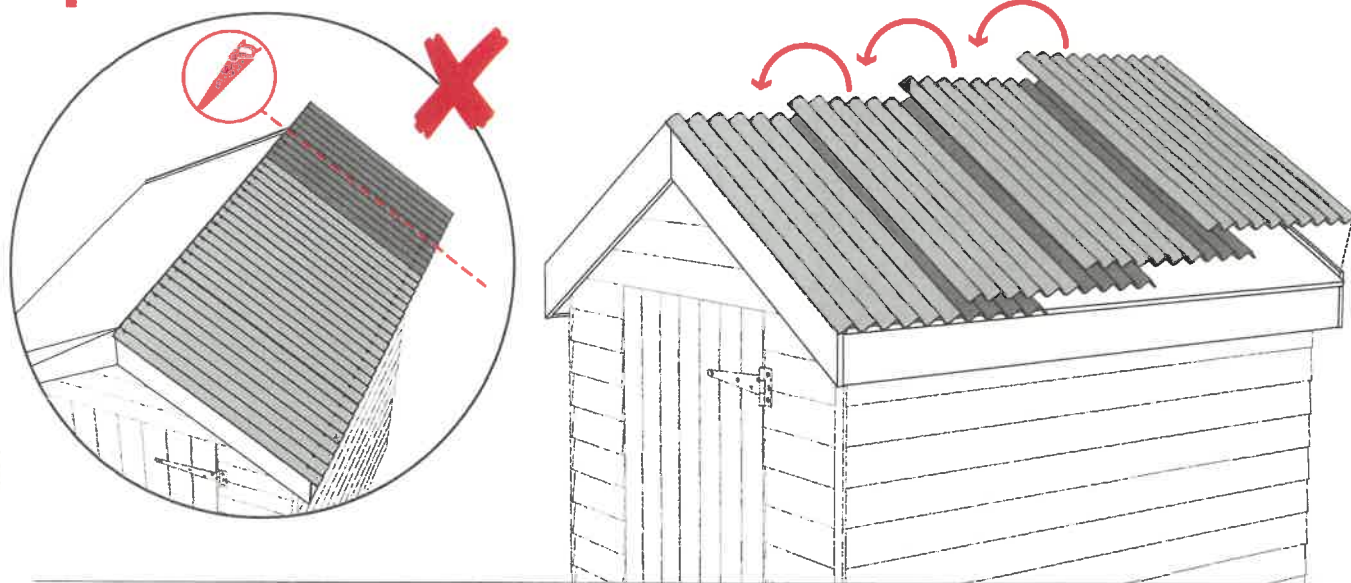

**2** PRIOR TO MAKING HORIZONTAL CUTS GIVE YOUR SAW BLADE A FEW SQUIRTS OF LUBRICATING OIL - IT'LL MAKE THE JOB A LOT EASIER.

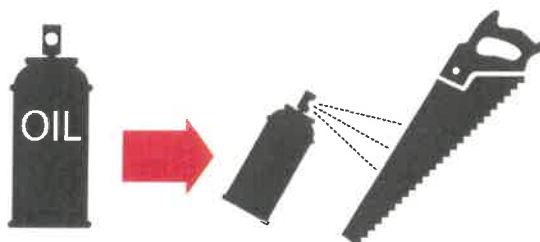

**3** **IMPORTANT** - TO KEEP YOUR NEW ROOF WATERTIGHT AND WEATHERPROOF, ENSURE THAT YOU ALWAYS NAIL THE ROOF SHEETS THROUGH THE CROWN OF THE CORRUGATION, NEVER THROUGH THE GULLEY.

